


INSTRUCTIONS BEFORE USE

INSTALLATION OF AGM OR LITHIUM V1 POWER BOXES


Before carrying out any work, ensure that the power box is not live. Caution! The power box carries low voltage (230V AC). A B1 or H1 qualification is required to commission the power box.

Upon receipt of the power box:

1. Take the key provided and open the meter box

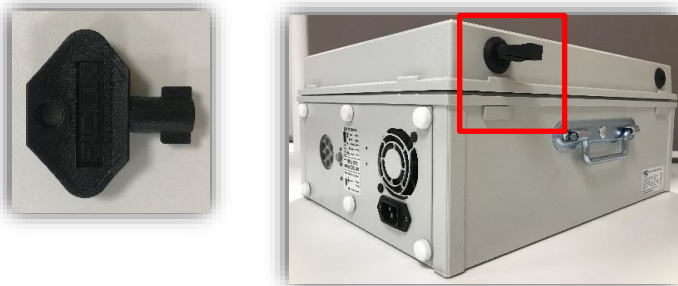

2. Press the switch to set it to position 1

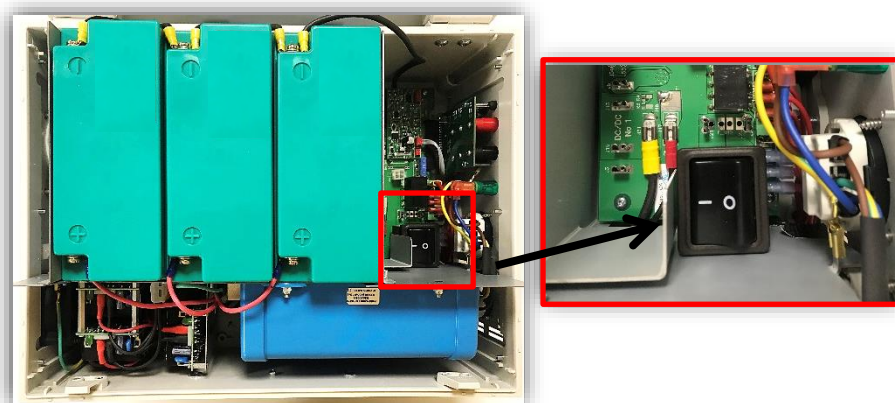

Or on the circuit breaker to set it to the red position (depending on the version of the switchboard)



3. Close the box (using the key provided)



4. Charge the power pack by plugging in the cable provided (when the green LED flashes, the power pack is charged)




5. Unplug the box once it is fully charged



6. Connect the computer equipment to a 220V and/or 24V power supply



7. Press the ON/OFF button to switch on the unit (the output LEDs will light up green)

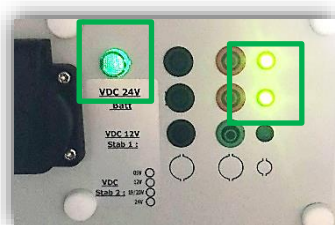

End of the set-up procedure.